



# WPC Co-Extrusion Decking


## Installation Manual

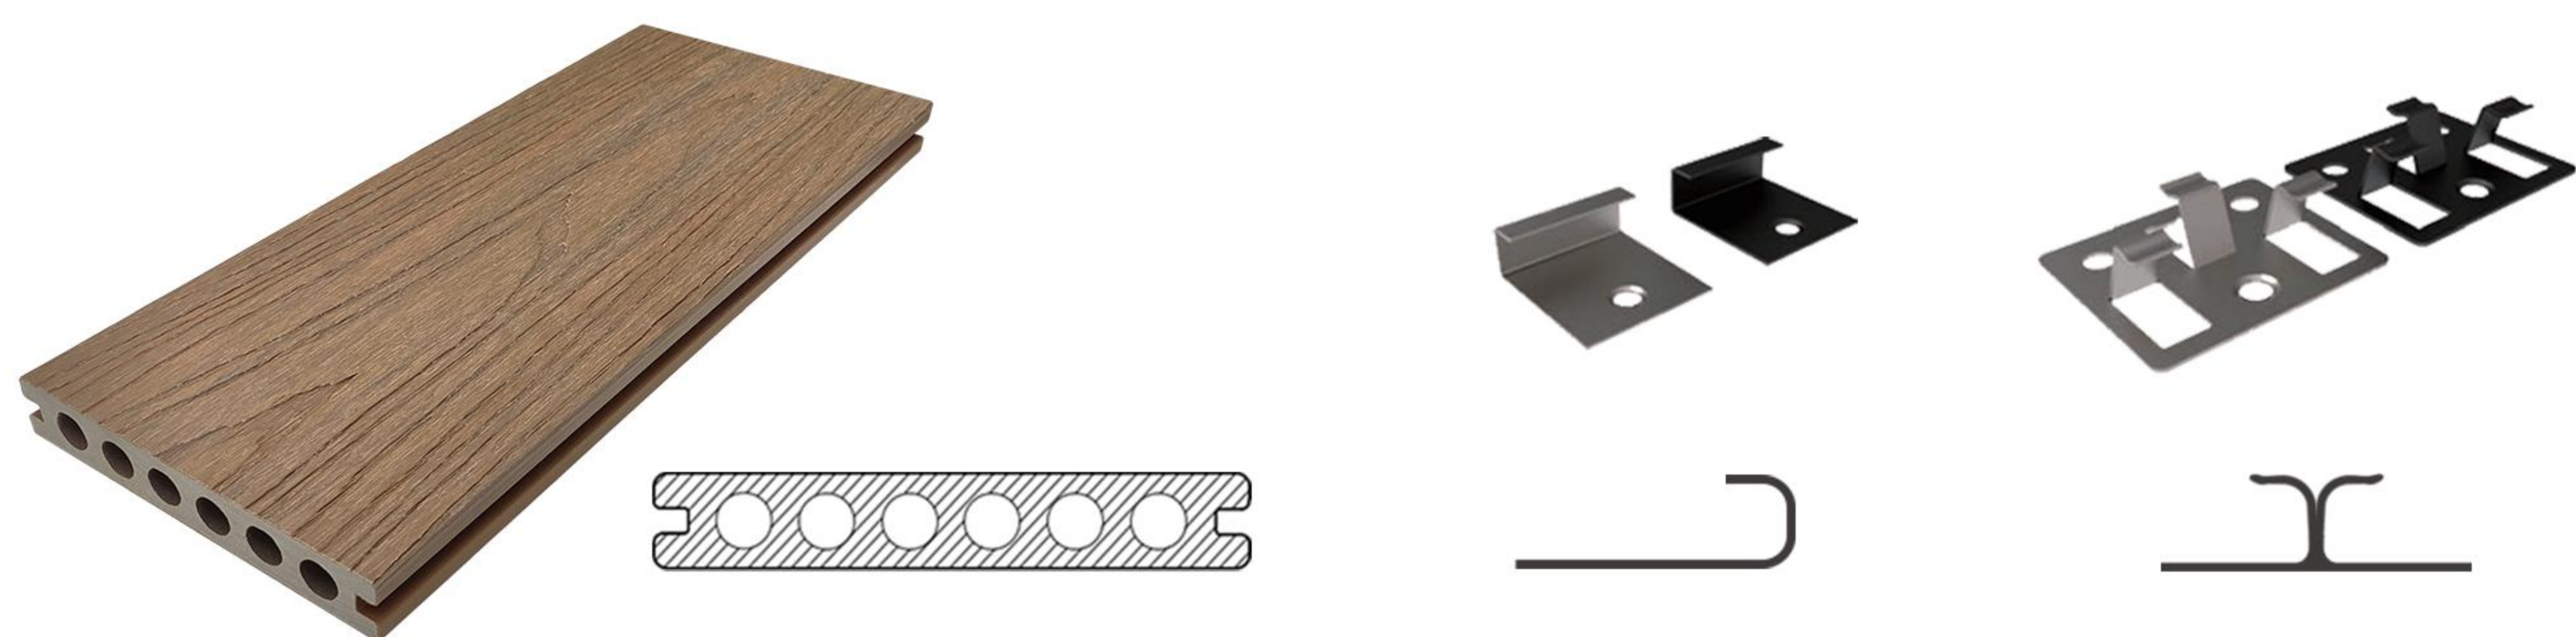




**Step1:** The first step is to lay the keel, the keel spacing is 30cm

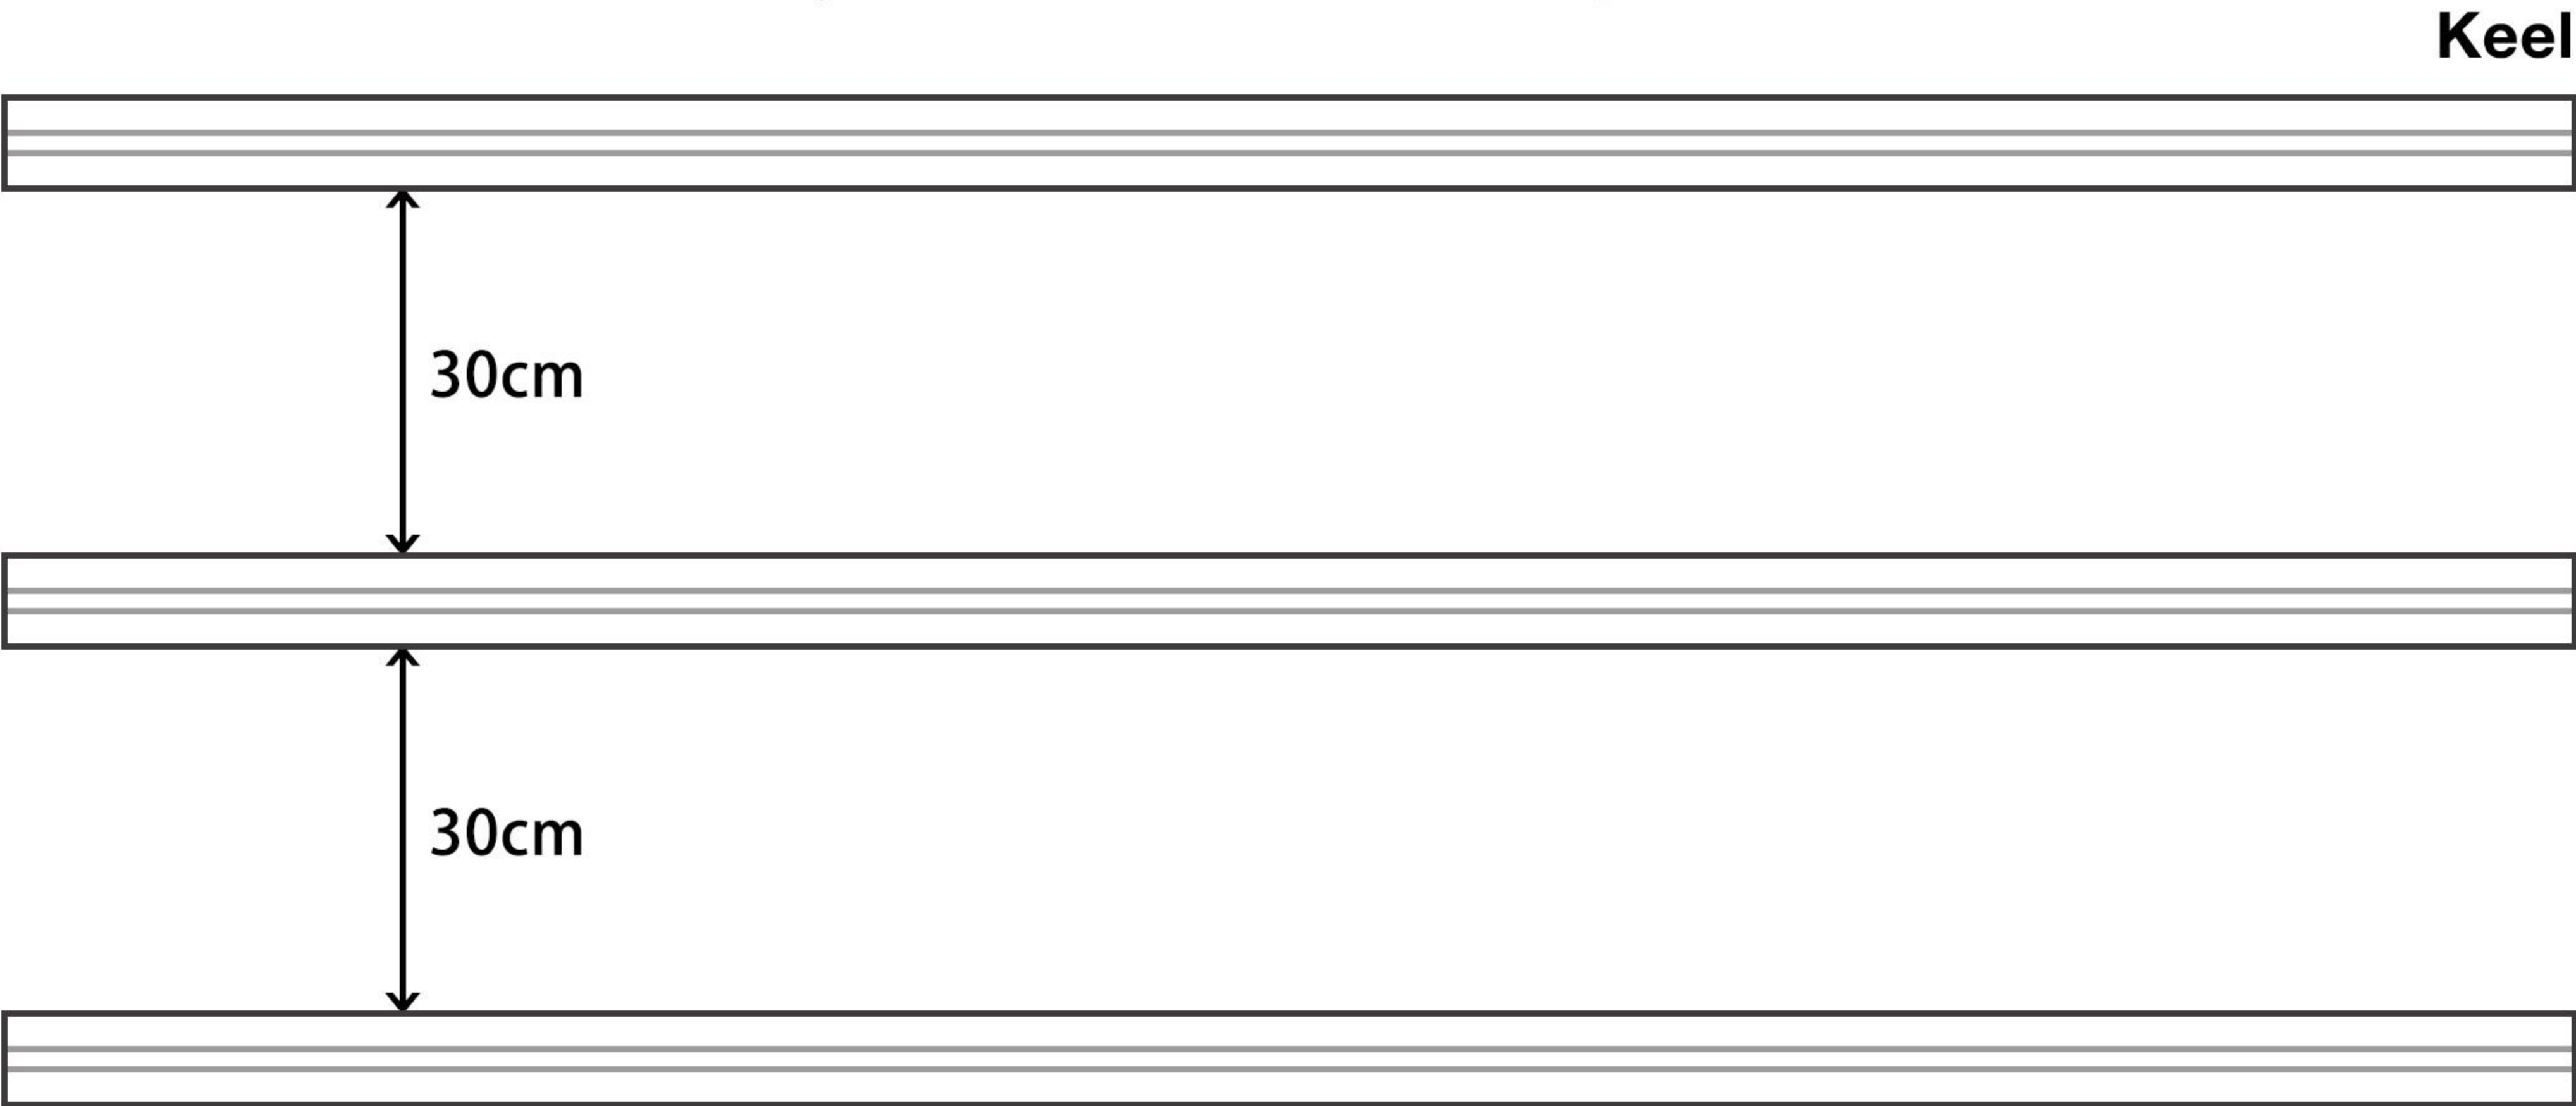


**Step2:** Nail the starting buckle on the keel to fix the floor of the first row

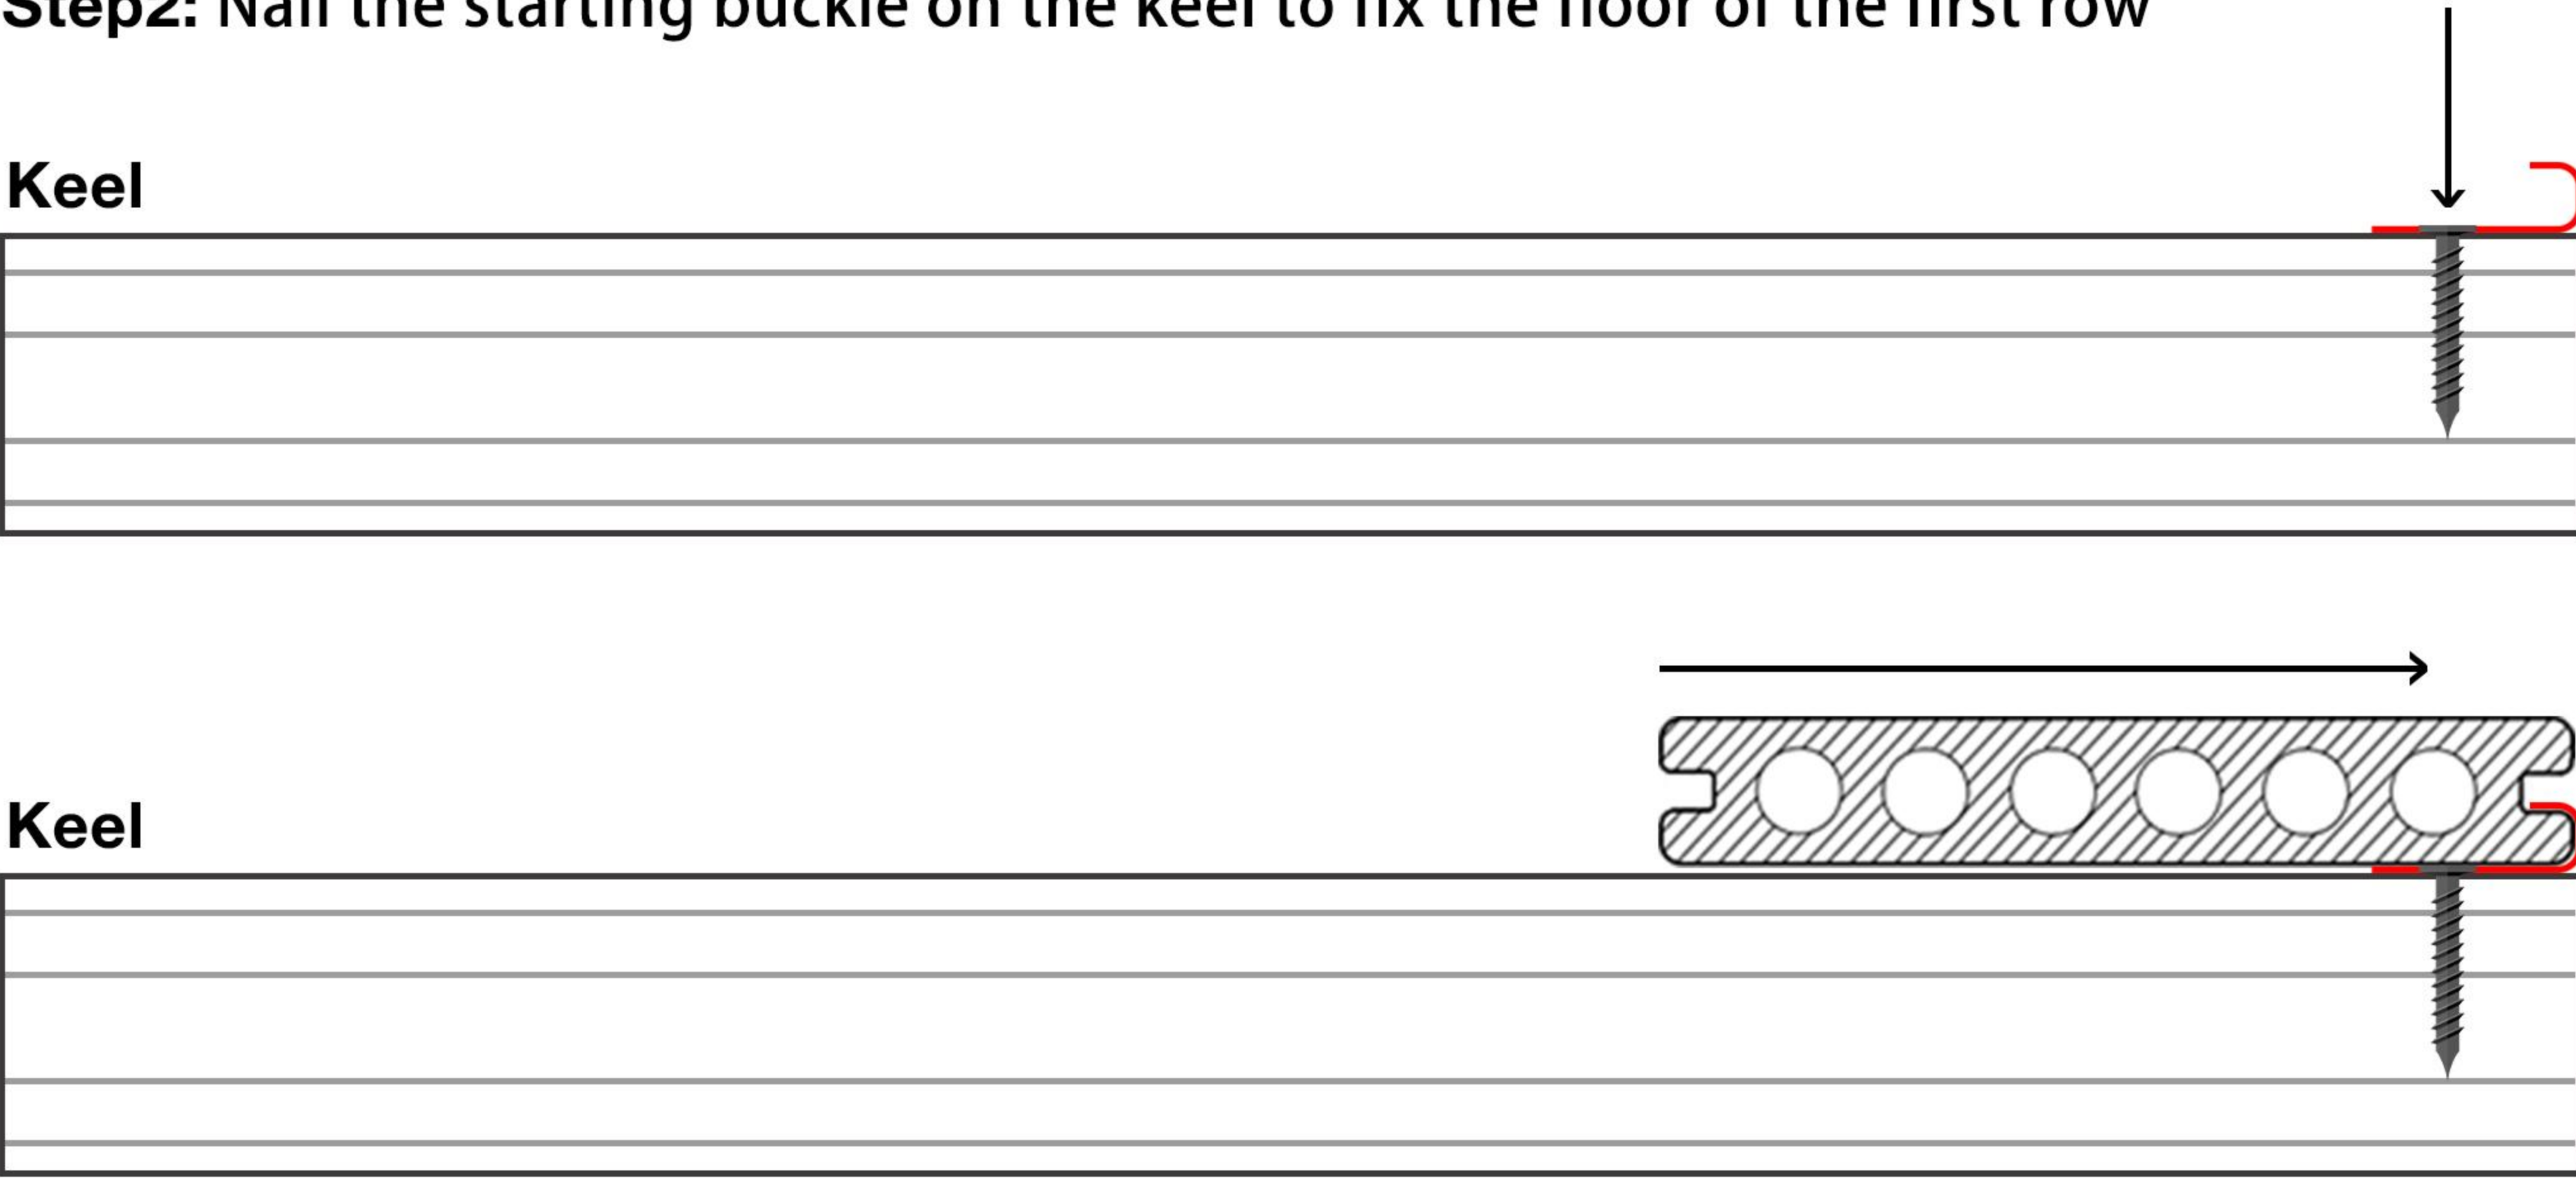

**Step3:** Install the fasteners between the floors and secure the second row of floors

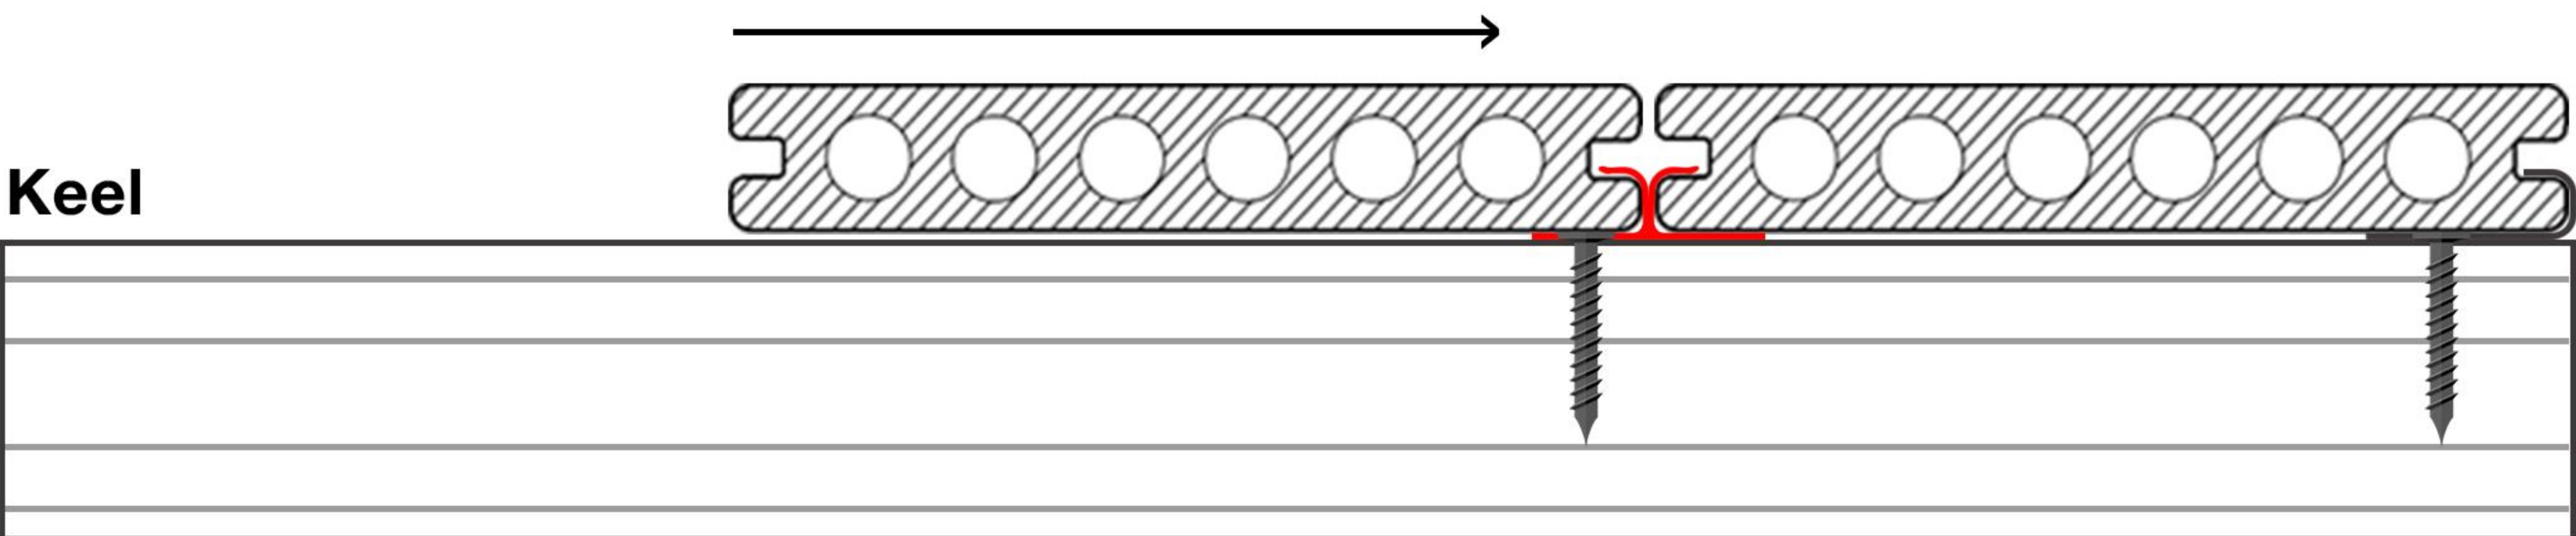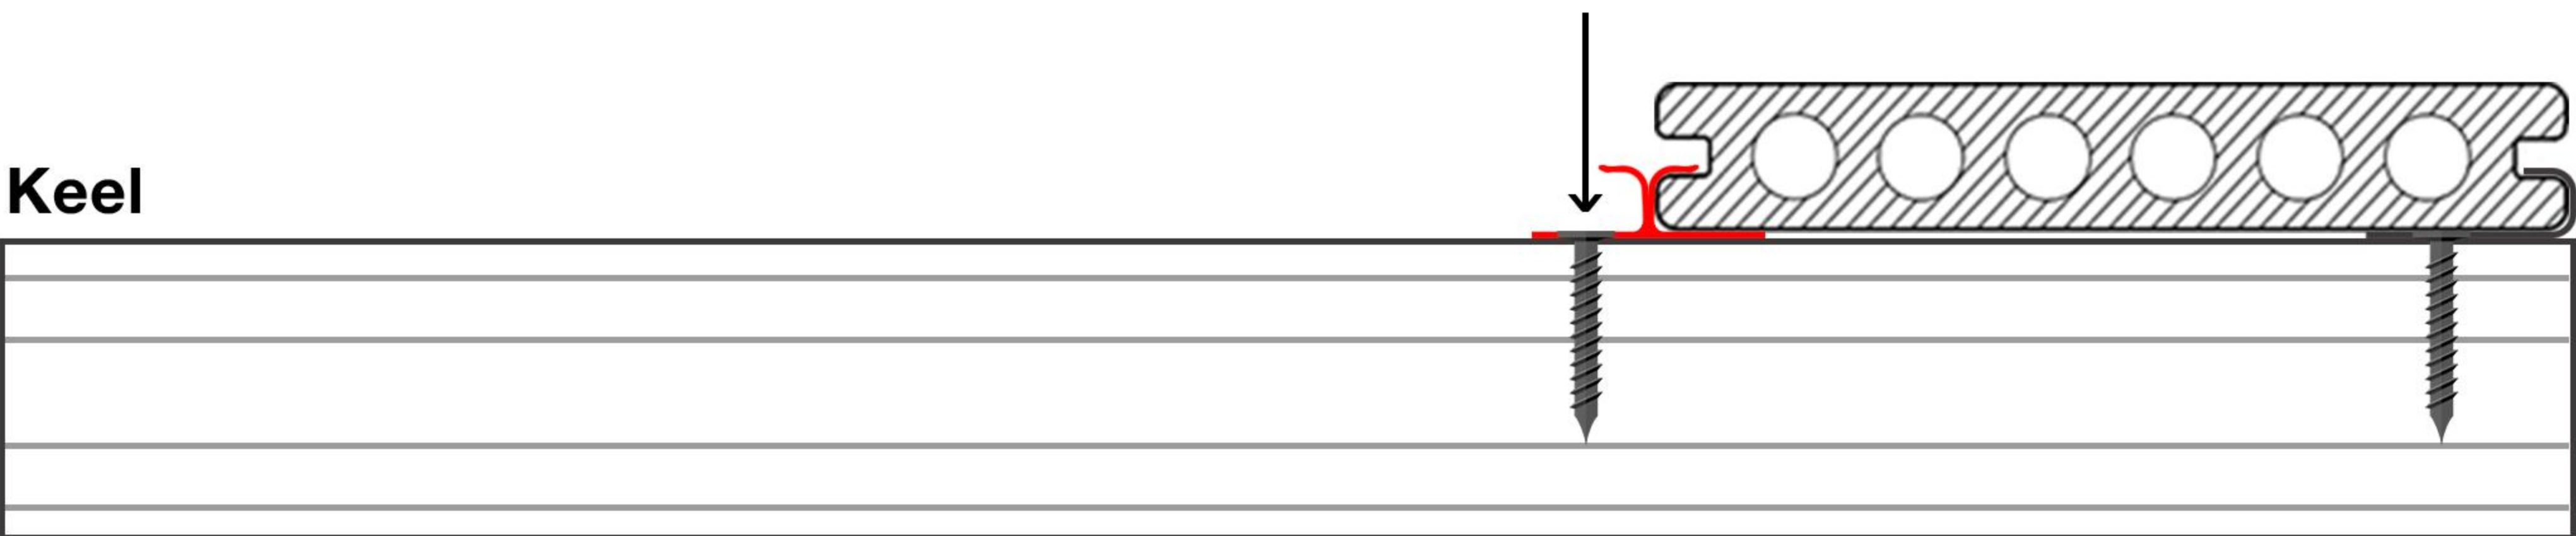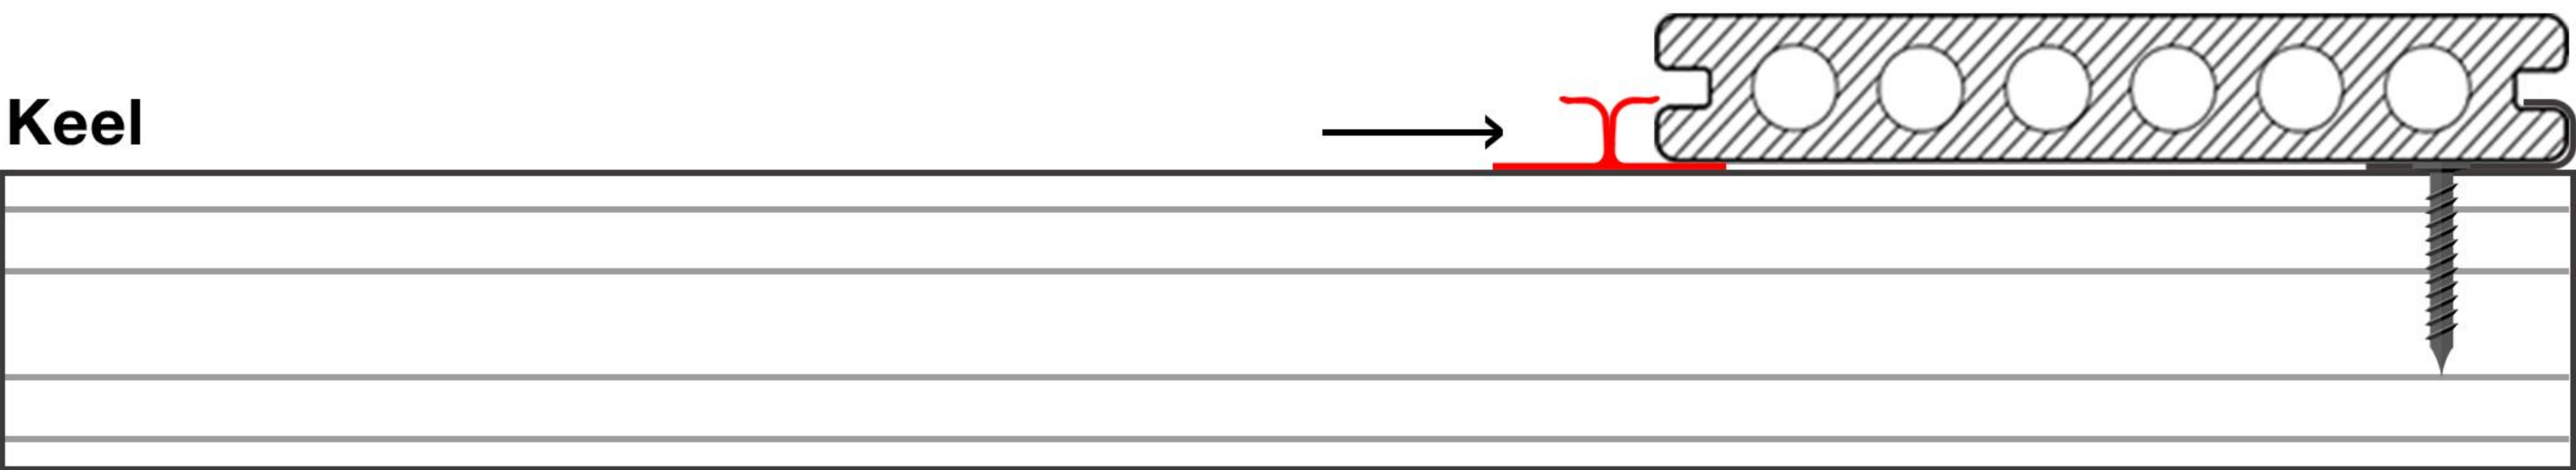

**Step4:** Repeat until the laying is complete

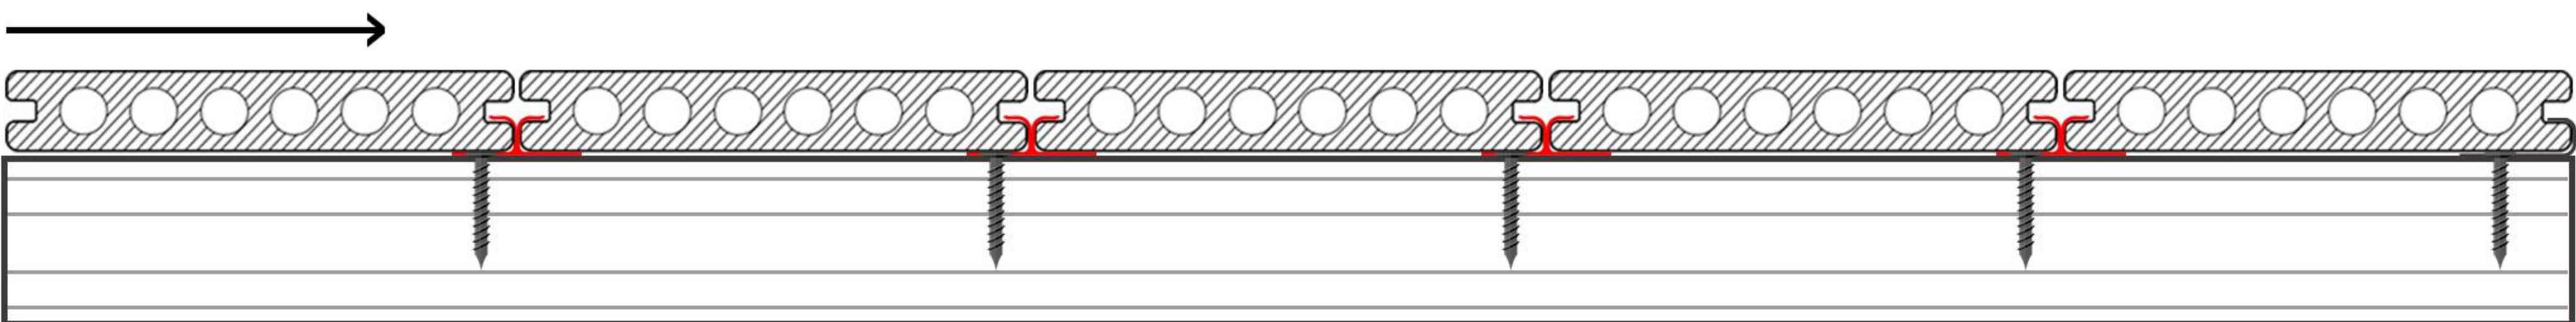

**Step5:** Screw the screw into the last wooden board and complete the installation

